


# DA STARTER. Copper Contact

Hex  $\frac{3}{8}$ " NC COPPER NUT -  $\frac{5}{8}$ " ACROSS FLATS.  
-  $\frac{3}{16}$ " to  $\frac{1}{4}$ " THICK

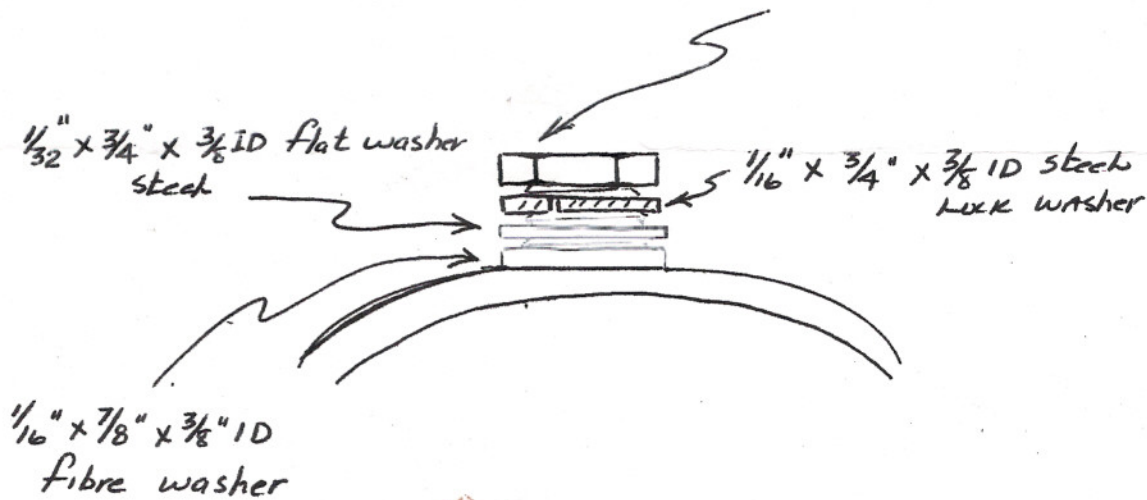

NOTE: STARTERS WHICH USE A LONG  
Threaded bolt to ATTACH cable directly  
to starter MAY be converted to DA  
"CONTACT" style by cutting off  
bolt flush with top of copper nut.